

User manual



PHILIPS

3	Contents
4	Important Safety Instructions
5	Important information
6	What's in the box
7	Your VOIP080
9	Connect and install
11	Call
15	Configuration
19	Troubleshooting
20	Information
21	FCC and IC statements
24	Index

Important Safety Instructions

Some of the following information may not apply to your particular product; however, when using telephone equipment, basic safety precautions should always be followed to reduce the risk of fire, electric shock and injury to persons, including the following:

1. Read and understand all instructions.
2. Follow all warnings and instructions marked on the product.
3. Unplug this product from the wall outlet before cleaning. Do not use liquid cleaners or aerosol cleaners. Use a damp cloth for cleaning.
4. Telephones should not be used while you are in a bathtub, shower or pool. Immersion of the telephone or handset in water could cause an electrical shock.
5. Slots and openings in the cabinet back or bottom are provided for ventilation, to protect it from overheating. These openings must not be blocked or covered. The openings should never be blocked by placing the product on the bed, sofa, rug, or other similar surface. This product should not be placed in a built-in installation unless proper ventilation is provided.
6. This product should be operated only from the type of power source indicated on the marking label. If you are not sure of the type of power supply to your home, consult your dealer or local power company.
7. Do not allow anything to rest on the power cord. Do not locate this product where the cord will be abused by persons walking on it.
8. Do not overload wall outlets and extension cords as this can result in the risk of fire or electric shock.
9. Never push objects of any kind into this product through cabinet slots as they may touch dangerous voltage points or short out parts that could result in a risk of fire or electric shock. Never spill liquid of any kind on the product.
10. To reduce the risk of electric shock, do not disassemble this product, but take it to a qualified service personnel when service or repair work is required. Opening or removing covers may expose you to dangerous voltages or other risks. Incorrect reassembly can cause electric shock when the appliance is subsequently used.
11. Do not expose the product to extreme temperatures such as areas near a hot radiator or stove or in a hot car.
12. Do not place lighted candles, cigarettes, cigars, etc., on the telephone.
13. Never touch uninsulated telephone wires or terminals unless the telephone line has been disconnected at the network interface.
14. Never install or modify telephone wiring during a lightning storm.
15. Never install telephone jacks in wet locations unless the jack is specifically designed for wet locations.
16. Use caution when installing or modifying telephone lines to prevent electrical shock and/or fire.
17. Unplug this product from the wall outlet and refer servicing to qualified service personnel under the following conditions:
 - A. When the power supply cord or plug is damaged or frayed.
 - B. If the product has been exposed to rain or water.
 - C. If the product does not operate normally by following the operating instructions.

- D. If the product's cabinet has been damaged.
- E. If the product exhibits a distinct change in performance.
18. Avoid using a telephone (other than a cordless type) during an electrical storm. There may be a remote risk of electric shock from lightning.
19. Do not use the telephone to report a gas leak in the vicinity of the leak.
20. Do not place this product on an unstable cart, stand or table. The product may fall, causing serious damage to the product.

IF YOUR PRODUCT UTILIZES BATTERIES, THE FOLLOWING ADDITIONAL PRECAUTIONS SHOULD BE OBSERVED:

1. Use only the type and size of battery(ies) specified in the user manual.
2. Do not dispose of the battery(ies) in fire. They may explode. Check with local codes for possible special disposal instructions.
3. Do not open or mutilate the battery(ies). Released electrolyte is corrosive and may cause damage to the eyes or skin. It may be toxic if swallowed.
4. Exercise care in handling battery(ies) in order not to short out the battery(ies) with conducting materials such as rings, bracelets, and keys. The battery(ies) or conductor may overheat and cause burns.
5. Do not attempt to recharge the battery(ies) provided with or identified for use with this product that are not intended to be charged. The battery(ies) may leak corrosive electrolyte or explode.
6. Do not attempt to rejuvenate the battery(ies) provided with or identified for use with this product by heating them. Sudden release of the battery(ies) electrolyte may occur causing burns or irritation to eyes or skin.
7. When replacing battery(ies), all batteries should be replaced at the same time. Mixing fresh and discharged batteries could increase internal cell pressure and rupture the discharged battery(ies). (Applies to products employing more than one separately replaceable primary battery.)
8. When inserting battery(ies) into this product, the proper polarity or direction must be observed. Reverse insertion of battery(ies) can cause charging, and that may result in leakage or explosion.
9. Remove battery(ies) from this product if storing over 30 days because the battery(ies) could leak and damage the product.
10. Discard "dead" battery(ies) as soon as possible since "dead" batteries are more likely to leak in a product.
11. Do not store this product, or the battery(ies) provided with or identified for use with this product, in high-temperature areas.
Batteries that are stored in a freezer or refrigerator for the purpose of extending shelf life should be protected from condensation during storage and defrosting. Batteries should be stabilized at room temperature prior to use after cold storage.
12. If your product uses rechargeable battery(ies), charge the battery(ies) only in accordance with the instructions and limitation specified in the User Manual.

SAVE THESE INSTRUCTIONS

Environment and safety

Safety information

This telephone is not designed for making emergency telephone calls when the power fails. Skype does not support emergency calls. An alternative should be made available for access to emergency calls.

Power requirements

The computer will provide power through the USB cable.

FCC CERTIFICATION NUMBER IS LOCATED ON THE CABINET BOTTOM

The term „IC:“ before the certification number signifies that Industry Canada technical specifications were met. This certification means that the equipment meets certain radio communications and operational requirements.

Safety precautions

- > Do not allow the phone to come into contact with liquids or moisture.
- > Do not open the phone. This could expose you to high voltages.
- > There is a slight chance that the telephone could be damaged by an electrical storm. It is recommended that users unplug the phone from the USB socket during a storm.
- > Do not use the phone in an explosive hazard area such as where there is gas leaking.
- > Children should be supervised to ensure the phone is used in a safe fashion.
- > Usage of the phone at high volume may cause hearing damage.

Environmental care

Please remember to observe the local regulations regarding the disposal of your packaging materials and old phone and where possible promote their recycling.

Installation requirements

In order to use the phone, your computer should meet the following requirements:

- Computer running Microsoft® Windows® 2000 or XP
- 400 MHz processor
- 128 MB RAM
- Free USB slot on computer
- Internet connection (broadband recommended)

Need help


For more information on troubleshooting and FAQ's:

Online help : www.p4c.philips.com


Troubleshooting : see page 19

Updated Informations for Users are available on : www.p4c.philips.com


What's in the box

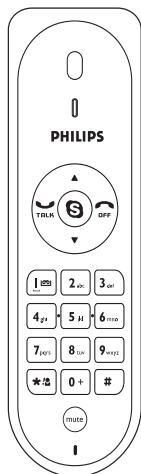


VOIP080 Phone

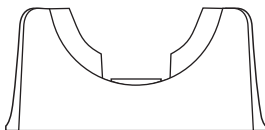


Cradle

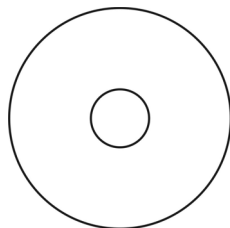

Installation CD

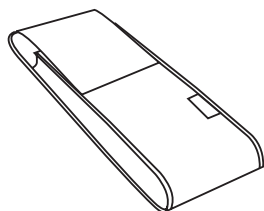


Carry case

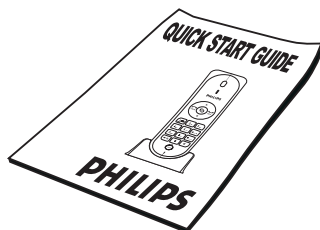

Quick Start Guide

What else you need :

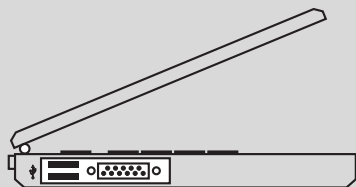

A desktop or a laptop with free USB port

- **Internet connection (broadband recommended).**
- **Only the Skype version printed on the Installation CD is granted for a full compatibility. New feature in upgraded Skype versions may not work with VOIP080.**

Overview phone front

1 Earpiece

2 LED

Flash quickly when a call comes in.
Stay on during a call.
Flash slowly when phone is muted.
Blink with voicemail(s) waiting.

3 Scroll Up Key

Scroll up an item.
Increase earpiece volume.

4 Talk Key

Make and answer calls.
Play voicemail.

5 Skype Key

Run Skype.
Toggle between Skype tabs.

6 Off Key

End a call.
Stop voicemail.
Minimize Skype window.

7 Scroll Down Key

Scroll down an item.
Decrease earpiece volume.

8 Digit 1 and Voicemail list Key

Enter 1.
Press and hold to access voicemail list.

9 Star and Contact list Key

Enter *.
Press and hold to access contact list.


10 Digit 0 and + Key

Enter 0 and +
Press and hold to enter +

11 Mute Key

Mute/unmute a call.

12 Microphone

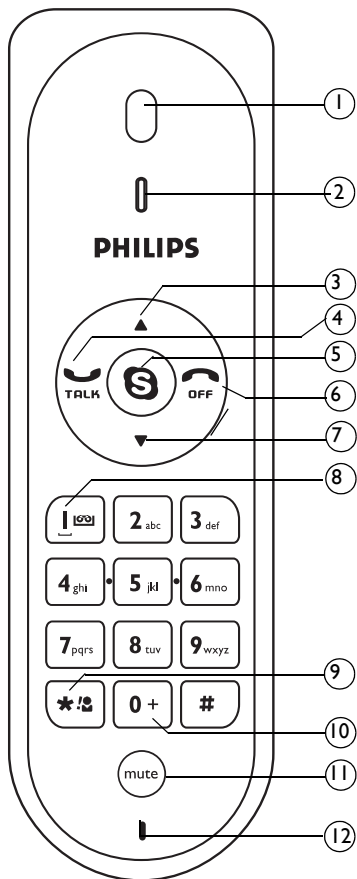

Overview phone rear


2 LED

13 USB connector grove

Use to contain the USB connector.


14 USB connector

Connect to USB slot on the computer

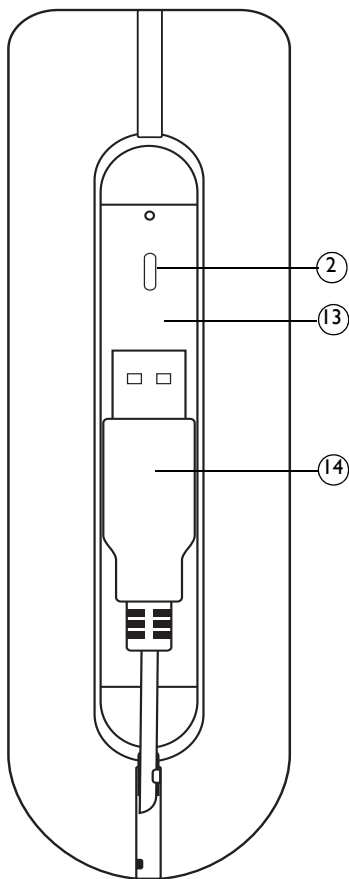

Connect

Note : Please make sure the USB connector is NOT plugged in before installation starts.

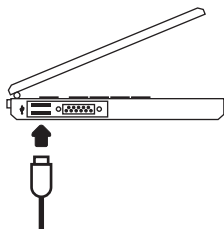

To connect your phone :


1. Unwind the USB cable from your phone.
2. Connect the USB connector directly to a USB slot on your computer.

Note : No battery is required. Power for the phone is provided by the computer through the USB cable.

Install

VOIP080 driver is provided in the enclosed CD. Please plug in USB connector to your computer before installation starts.

To install the VOIP080 driver :

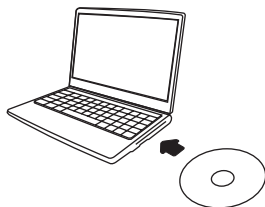

1. Insert the Installation CD into the computer's CD ROM (or DVD ROM) drive.
2. The installation program will start automatically.
3. Follow the instructions on the screen.
4. Click on **Quit**.
5. Remove the installation CD from CD ROM (or DVD ROM) drive.


TIP : If for some reasons the installation does not start automatically:

- Click **START** and then **Run** on Windows.
- Type **explorer** and navigate to the CD ROM (or DVD ROM) drive.
- Double-click on **SetupWizard.exe**.

Note : If your operating system is Windows 2000, you need to restart your computer to complete the installation.


Note : The VOIP080 driver should auto-start if **Autorun VOIP080 Driver at Startup** option is checked during installation.

Set up for the first time

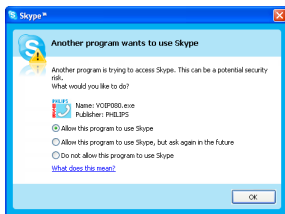

1. Make sure the phone is connected to a USB slot directly on your computer.
2. Start the VOIP080 driver by double clicking the shortcut icon created on your desktop, if the driver is not running.
3. If this is the first time you run the VOIP080 driver, you will see the message **Another program wants to use Skype**. Select **Allow this program to use Skype** and click **OK**.
4. Start Skype if VOIP080 driver has not started Skype for you. Login with your Skype account.

Note : If you don't have a Skype account, you can find more details about how to create one on <http://www.skype.com>.

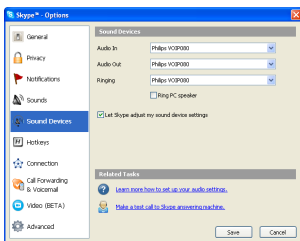

5. In the Skype window, click on **Tools**. Select **Options**. Select **Sound Devices** on the left.
6. For XP user, select **Philips VOIP080** in the **Audio In**, **Audio Out**, and **Ringling** pull-down box. Click **SAVE**.
For Windows 2000 user, select **USB Audio Device** in the **Audio In**, **Audio Out**, and **Ringling** pull-down box. Click **SAVE**.

TIP : When VOIP080 driver is running, a tray icon will appear at the bottom right corner of your computer screen.

Connection status

When the mouse cursor is placed over the VOIP080 tray icon, the current status of your phone will be displayed. When your phone is ready to be used, the tray icon is blue and the status will show **VOIP080 Phone - connected**. Otherwise, you can correct the problem according to the displayed status.

Connection status :



(Blue) USB plugged in, connection to Skype normal.




(Grey) USB plugged in, but Skype is offline / not logged in / not running.



(Red) USB not plugged in.

For further information on how to fix a connection problem, see page 19.

Call Skype Contact

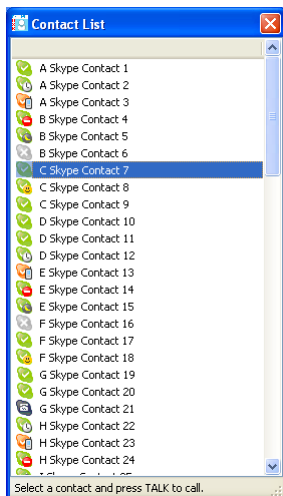

1. Press and hold star key  to open the contact list window.
2. Press  /  to select the contact you want to call.
3. Press  to make the call.

Search by letter

While the contact list window is opened, enter the first letter of the contact using the keypad to search.

E.g. to search a contact "Sam", press  four times. The first contact that begins with letter S will be selected.

E.g. to search a SkypeOut contact "+1233456789", press  once. The first contact that begins with + will be selected.

OR

1. Press  until the Skype contact list tab is focused.
2. Press  /  to select the contact you want to call.
3. Press  to make the call.

TIP : To minimize Skype, press and hold .

Call SkypeOut Number

1. Press  until the Skype contact list tab is focused.
2. Press  /  to select the contact you want to call.
3. Press  to make the call.

OR

1. Use the keypad to dial the number you want to call.
2. Press  to make the call.

Note : In order to make SkypeOut calls, you need to purchase Skype credits. For more details, please visit : <http://www.skype.com/store/buy/skypeout.html>.

Note : To make a SkypeOut call, it is necessary to dial the country prefix before the phone number you are calling, i.e. 00, 011 or +. For example:

When making calls to North America : 00-1-905-1234567 or 011-1-905-1234567

When making international calls : 00-852-12345678 or +852-12345678

TIP : To enter +, press and hold .

To clear entered numbers, press  OFF .

WARNING - Emergency Call : Skype does not support emergency call. Please use normal telephone line in case of emergency.

Answer Call

When an incoming call arrives, the phone will ring and the LED will flash quickly.

To answer the call, press  TALK .

TIP : To deny a call, press  OFF .

You can answer other incoming calls during a call. A call waiting tone can be heard, and the LED on the phone will flash quickly. To pick up

the incoming call, press  TALK . The original call will be put on hold.

Note : When you are in DND (Do Not Disturb)  status in Skype, the phone will not ring. LED on the phone will still flash to notify you of the incoming call.

TIP : You can set the ring tone off through the VOIP080 driver. For more information, see page 18.

End Call

To end a call, press  OFF .

Features during a Call

Adjust Earpiece Volume

You can increase or decrease the volume of the caller's voice during a call. There are 8 volume levels for selection.

To adjust the volume :

1. Press ▲ to increase the volume.
2. Press ▼ to decrease the volume.

TIP : The microphone volume and the earpiece volume can also be adjusted through the VOIP080 driver. For more information, see page 16.

Mute Microphone


During a call, if you wish to speak to someone privately without the opposite party hearing your conversation :

1. Press  to mute the microphone. You can still hear the opposite party talking.
LED will flash slowly.
2. Press  again to restore communication.

Listen to Voicemail

When there are voicemails waiting to be retrieved, the LED on the phone will blink slowly.

Note : For details about how to get a voicemail account, please visit : <http://www.skype.com/products/skypevoicemail/>.

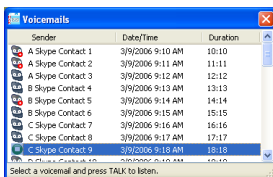

To listen to a voicemail :

1. Press and hold  to open the voicemail list window.
2. Press ▲ / ▼ to select the voicemail you want to retrieve.
3. Press  to listen to the voicemail.

TIP : Press  to stop a voicemail while it is being played.
Press  again to close the voicemail window.

Voicemail status icons



Indicates a new voicemail.



Indicates an old voicemail.



Indicates the voicemail is currently playing. Press  to stop it.

Settings

The VOIP080 driver allows you to customize your phone to a setting that suits you best.

To start configuring your phone :

Double click the tray icon  at the bottom right corner of your computer screen.

OR

Right-click the tray icon  and select one of the four options :

- General Options
- Audio Settings
- Tone Settings
- About

The VOIP080 Phone Settings window will be opened.

- Click **Apply** to apply changes.
- Click **Cancel** to cancel all made changes.
- Click **OK** to apply changes and close the window.


To exit the VOIP080 driver :

Right-click the tray icon  and select **EXIT**. In the opened exit prompt window, click **OK** to confirm exit.

Note : If VOIP080 driver is closed, calls cannot be made or received through the phone.

TIP : To bypass the exit prompt window, check the **Do Not Show This Message Again** checkbox before clicking **OK**.

General Options

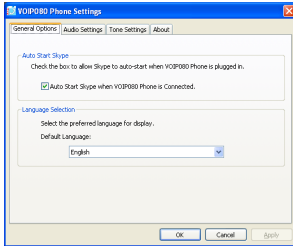

Open the VOIP080 Phone Settings window and select the **General Options** tab. The following settings will be available.

Auto Start Skype When VOIP080 Phone is Connected

When the box is checked, Skype will start automatically when VOIP080 phone is plugged into the computer. It is recommended to leave this box checked.


Change language

Choose a language from the pull-down menu under **Language Selection** and click **OK** to apply the change.

To change Skype language display

To change the language in Skype open the Skype program and go to **Tools** and then **Change Language** and select a language.

Audio Input and Output Device Settings

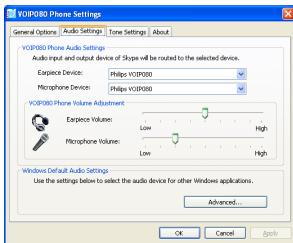

Open the VOIP080 Phone Settings window and select the **Audio Settings** tab. The following settings will be available.

Set the device that audio output of Skype routes to

Select a device under **Earpiece Device** to listen to audio from Skype. It is recommended to choose **Philips VOIP080** for XP user, or **USB Audio Device** for Windows 2000 user.

Set the device that audio input of Skype routes to

Select a device under **Microphone Device** for audio input of Skype to route to. It is recommended to choose **Philips VOIP080** for XP user, or **USB Audio Device** for Windows 2000 user.

Adjust the earpiece volume

Adjust the Earpiece Volume bar to change volume at earpiece. When the bar is moved to the lowest position, the earpiece will be muted.

Adjust the microphone volume

Adjust the Microphone Volume bar to change volume at microphone. When the bar is moved to the lowest position, the microphone will be muted.


Set the device that audio input/output of other Windows applications route to

You can choose a different audio input/output device for other Windows applications, for example: Windows Media Player.

For Windows XP user

Click **Advanced** to open **Sound and Audio Devices Properties** window. Select an audio output device under **Sound playback**. Select an audio input device under **Sound recording**.


Make sure **Use only Default Devices** is checked and click **OK**.

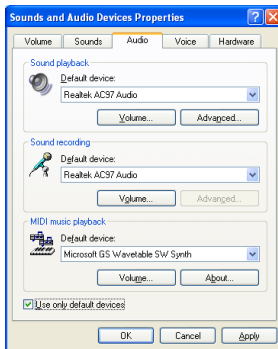

For Windows 2000 user

Click **Advanced** to open **Sounds and Multimedia Properties** window. Select an audio output device under **Sound playback**. Select an audio input device under **Sound recording**.


Make sure **Use only Preferred Devices** is checked and click **OK**.

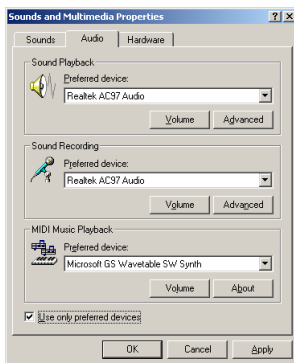

Note : It is recommended to set both audio input and output device as the sound card on your computer.

Note : By checking the checkbox **Use only Default Devices** (for XP user) or **Use only Preferred Devices** (for Windows 2000 user), you will be able to separate the audio path of your computer. Sound from Skype will be emitted at the phone, while audio from other Windows applications will be emitted at the selected device.

Ring Tone and Key Tone Settings

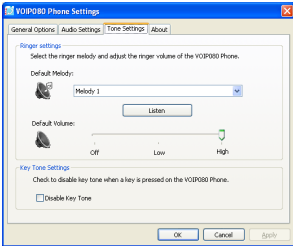

Open the VOIP080 Phone Settings window and select the **Tone Settings** tab. The following settings will be available.

Change ringer melody

Select one of the melodies under **Ringer Settings** and click **OK** to apply the change. You can click **Listen** to hear how the melody sounds.

Change ringer volume

Select a volume level under **Ringer Settings** and click **OK** to apply the change. Select **Off** to disable the ringer.

Disable key tone

Check the **Disable Key Tone** checkbox under **Key Tone Settings**. No sound will be emitted when a key is pressed.

Product information

Open the VOIP080 Phone Settings window and select the **About** tab to find out information about your VOIP080 phone.

Default settings

Auto Start Skype when VOIP080 Phone is connected :	Checked
Earpiece Device :	Philips VOIP080
Microphone Device :	Philips VOIP080
Ringer Melody :	Melody I
Ringer Level :	High
Disable Key Tone :	Unchecked
Exit prompt message :	Enabled

Problems	Solutions
The phone does not ring.	• Make sure the ringer volume is not set to off. • Make sure Skype status is not in DND (Do Not Disturb).
No sound during call.	• Check if the audio path is set correctly under Skype. • Turn up the earpiece volume.
Opposite party hears no sound.	• Unmute the microphone. • Turn up the microphone volume using VOIP080 driver. • Make sure the call is not on hold.
Cannot make or receive Skype calls.	• Make sure your Skype status is not offline. • Check if the USB cable is connected properly. • Check if the VOIP080 driver is running.
Cannot make SkypeOut calls.	• Enter 00, 011 or + before the number to dial. • Check your account to see if you have enough credit.
Cannot open the contact list.	• Close the voicemail list and try again.
Cannot open the voicemail list.	• Close the contact list and try again.
LED keeps flashing slowly while off call.	• Retrieve your new voicemail(s).
No key tone can be heard.	• Enable key tone using VOIP080 driver.
Selected "Do not allow this program to use Skype" by mistake.	• In Skype, go to Tools > Options > Privacy > Manage other program' access to Skype, select VOIP080.EXE, click CHANGE, select Allow this program to use Skype, and click OK.
Connection status shows : VOIP080 - API access denied.	• See above

If the above solutions still do not solve your problem, remove the phone from the computer and restart Skype and VOIP080 driver. Wait for 15 minutes and try again.

Warranty

The warranty informations are available on www.p4c.philips.com.

Conformity

The Declaration of conformity is available on www.p4c.philips.com.

Electric, Magnetic and Electromagnetic Fields ("EMF")

1. Philips Royal Electronics manufactures and sells many consumers oriented products, which usually, as with any electronic apparatus, have the ability to emit and receive electro magnetic signals.
2. One of Philips' leading Business Principles is to take all necessary health and safety precautions for our products, to comply with all applicable legal requirements and to stay well within the EMF standards applicable at the time of producing the products.
3. Philips is committed to develop, produce and market products that cause no adverse health effects.
4. Philips confirms that if its products are handled properly for their intended use, they are safe to use according to scientific evidence available today.
5. Philips plays an active role in the development of international EMF and safety standards, enabling Philips to anticipate further developments in standardization for early integration in its products.

Recycling & disposal

Disposal instructions for old products :

The purpose of the WEEE directive (Waste Electrical and Electronic Equipment; 2002/96/EC) is to ensure that products are recycled using best available treatment, recovery and recycling techniques to ensure human health and high environmental protection.

Your product is designed and manufactured with high quality materials and components, which can be recycled and reused.



Do not dispose of your old product in your general household waste bin.

Inform yourself about the local separate collection system for electrical and electronic products marked by this symbol.

Use one of the following disposal options :

1. Dispose of the complete product (including its cables, plugs and accessories) in the designated WEEE collection facilities.
2. If you purchase a replacement product, hand your complete old product back to the retailer. He should accept it as required by the WEEE directive.

Philips has marked the packaging with standard symbols designed to promote the recycling and appropriate disposal of your eventual waste.



A financial contribution has been paid to the associated national recovery & recycling system.



The labelled packaging material is recyclable.

Equipment approval Information

Your telephone equipment is approved for connection to the public switched telephone network and is in compliance with parts 15 and 68, FCC Rules and Regulations and the Technical Requirements for Telephone Terminal Equipment published by ACTA.

Notification to the local telephone company

On the bottom of this equipment is a label indicating, among other information, the US number and Ringer Equivalence Number (REN) for the equipment. You must, upon request, provide this information to your telephone company.

The REN is useful in determining the number of devices you may connect to your telephone line and still have all of these devices ring when your telephone number is called. In most (but not all) areas, the sum of the RENs of all devices connected to one line should not exceed 5. To be certain of the number of devices you may connect to your line as determined by the REN, you should contact your local telephone company.

A plug and jack used to connect this equipment to the premises wiring and telephone network must comply with the applicable FCC Part 68 rules and requirements adopted by the ACTA. A compliant telephone cord and modular plug is provided with this product. It is designed to be connected to a compatible modular jack that is also compliant. See installation instructions for details.

Notes

- This equipment may not be used on coin service provided by the telephone company.
- Party lines are subject to state tariffs, and therefore, you may not be able to use your own telephone equipment if you are on a party line. Check with your local telephone company.
- Notice must be given to the telephone company upon permanent disconnection of your telephone from your line.
- If your home has specially wired alarm equipment connected to the telephone line, ensure the installation of this product does not disable your alarm equipment. If you have questions about what will disable alarm equipment, consult your telephone company or a qualified installer.

Rights of the Phone Company

Should your equipment cause trouble on your line which may harm the telephone network, the telephone company shall, where practicable, notify you that temporary discontinuance of service may be required. Where prior notice is not practicable and the circumstances warrant such action, the telephone company may temporarily discontinue service immediately. In case of such temporary discontinuance, the telephone company must:

(1) promptly notify you of such temporary discontinuance; (2) afford you the opportunity to correct the situation; and (3) inform you of your right to bring a complaint to the Commission pursuant to procedures set forth in Subpart E of Part 68, FCC Rules and Regulations.

The telephone company may make changes in its communications facilities, equipment, operations or procedures where such action is required in the operation of its business and not inconsistent with FCC rules and Regulations. If these changes are expected to affect the use or performance of your telephone equipment, the telephone company must give you adequate notice, in writing, to allow you to maintain uninterrupted service.

Interference Information

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference; and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna (that is, the antenna for radio or television that is “receiving” the interference).
- Reorient or relocate and increase the separation between the telecommunications equipment and receiving antenna.
- Connect the telecommunications equipment into an outlet on a circuit different from that to which the receiving antenna is connected.

If these measures do not eliminate the interference, please consult your dealer or an experienced radio/television technician for additional suggestions. Also, the Federal Communications Commission has prepared a helpful booklet, “How To Identify and Resolve Radio/TV Interference Problems”. This booklet is available from the U.S. Government Printing Office, Washington, D.C. 20402.

Please specify stock number 004-000-00345-4 when ordering copies.

Noise

Electrical pulse noise is present at one time or another. This is most intense during electrical storms. Certain kinds of electrical equipment, such as light dimmers, fluorescent bulbs, motors, fans, etc., also generate pulse noise. Because radio frequencies are susceptible to this, you may on occasion hear pulse noise through the receiver. This is usually only a minor annoyance and should not be interpreted as a defect of the unit.

FCC RF Radiation Exposure Statement

This equipment complies with FCC RF radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with a minimum distance of 20 centimeters between the radiator and your body. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

For hand held operation, this phone has been tested and meets the FCC RF exposure guidelines. Use of other accessories may not ensure compliance with FCC RF exposure guidelines.

Hearing Aid Compatibility (HAC)

This telephone system meets FCC and Industry Canada standards for Hearing Aid Compatibility.

Privacy

Privacy of communications may not be ensured when using this telephone.

Additional Information

I.C. Notice

Terminal Equipment

NOTICE : This equipment meets the applicable Industry Canada Terminal Equipment Technical Specifications.

This is confirmed by the registration number. The abbreviation, IC, before the registration number signifies that registration was performed based on a Declaration of Conformity indicating that Industry Canada technical specifications were met. It does not imply that Industry Canada approved the equipment.

NOTICE : The Ringer Equivalence Number (REN) for this terminal equipment is marked on the equipment itself. The REN assigned to each terminal equipment provides an indication of the maximum number of terminals allowed to be connected to a telephone interface. The termination on an interface may consist of any combination of devices subject only to the requirement that the sum of the Ringer Equivalence Numbers of all the devices does not exceed five.

Radio Equipment

The term "IC:" before the radio certification number only signifies that Industry Canada technical specifications were met. Operation is subject to the following two conditions : (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

Do not attempt to repair or modify this equipment

Repairs to certified equipment should be made by an authorized maintenance facility designated by the supplier. Any repairs or alterations made by the user to the equipment may render the equipment void in product warranty and compliance. This could also void the user's authority to operate the equipment.

Service Centers

USA

Philips Consumer Electronics
P.O. Box 671539
Marietta, GA 30006-0026
Phone: 1-888-PHILIPS (744-5477)
Phone: 1-800-363-7278 (English)
Phone: 1-800-661-6162 (Français)

CANADA

Philips - Consumer Service Division
4977 Levy Street
Ville St. Lurent,
Quebec H4R 2N9
Phone: 1-800-363-7278 (English)
Phone: 1-800-661-6162 (Français)

A

Adjust Earpiece Volume 13
Answer Call 12
Audio input 16
Audio Input and Output Device Settings 16
Audio input/output of other Windows applications 17
Audio output 16
Auto Start Skype When VOIP080 Phone is Connected 16

C

Call 11
Call Skype Contact 11
Call SkypeOut Number 11
Change language 16
Change Skype language display 16
Clear entered numbers 12
Configuration 15
Conformity 20
Connect 9
Connection status 10
Contents 3
Country prefix 12

D

Default settings 18
Deny a call 12
Disable key tone 18
Do Not Disturb 12

E

Earpiece Volume 13
Earpiece volume 16
Electric, Magnetic and Electromagnetic Fields ("EMF") 20
Emergency Call 12
End Call 12
Environmental care 5
Equipment approval Information 21

F

FCC and IC statements 21
FCC RF Radiation Exposure Statement 22
Features during a Call 13

H

Hearing Aid Compatibility (HAC) 22
Help 5

I

Important information 5
Install 9
Installation CD 9
Installation requirements 5
Interference Information 22

K

Key Tone Settings 18

L

LED 7, 8
Listen to voicemail 13

M

Microphone volume 17
Mute Microphone 13

N

Noise 22
Notification to the local telephone company 21

O

Online help 5
Options 16

P

Phone front 7
Phone rear 8
Power requirements 5
Privacy 23
Product information 18

R

Radio Equipment 23
Recycling & disposal 20
Rights of the Phone Company 21
Ring Tone 18
Ring tone off 12
Ringer melody 18

S

Safety 5
Safety Instructions 4
Search by letter 11
Second call 12
Separate the audio path of your computer 17
Service Centers 23
Set up for the first time 10
Settings 15
Skype account 10, 11
Stop voicemail playback 13

T

Terminal Equipment 23
Troubleshooting 19

U

USB connector 8

V

Voicemail 13
Voicemail account 13
Voicemail status icons 14
VOIP 080 driver 10
VOIP 080 Phone Settings window 15
VOIP080 driver 15

W

Warranty 20
What else you need 6
What's in the box 6
Windows 2000 user 17
Windows XP user 17

Y

Your VOIP 080 7



Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips Electronics N.V. or their respective owners.
2006 © Koninklijke Philips Electronics N.V. All rights reserved.

www.philips.com

3111 285 30741

